

## Applying Your Decals: Double Sided Snail Installation

### WHAT YOU'LL NEED:


- 70/30 Isopropyl Alcohol/Water Solution
- Squeegee (enclosed)
- Painters Tape
- Scissors
- Paper Towels

### SURFACE PREP FOR INSTALLATION:

Clean surface with 70/30 Isopropyl Alcohol/water solution. Be sure to remove any residual dirt, dust or adhesive. Do not use ammonia based glass cleaners as they may reduce the adhesion of the new graphics. **Graphic is intended for children, we recommend installing the top of graphic 42-48" from the ground.**



1. Clean surface with alcohol solution to remove all dust and debris prior to installation. Surface must be dry before proceeding.
3. Once the larger graphic is in the desired position use the painters tape to adhere the graphic to the window. Make sure to allow enough room under the graphic for the second decal.

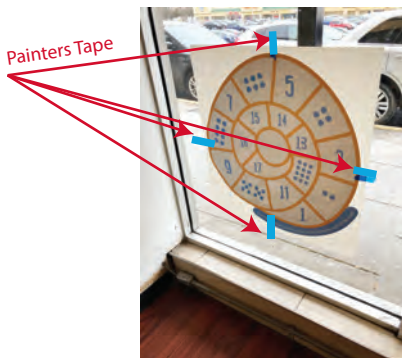

Place painters tape on all sides of the graphic.

2. Cut smaller rectangle decal away from larger snail and set aside.
4. Remove top piece of tape. Take the graphic from the top and carefully peel away from the backing paper, peeling half-way down to the side pieces of tape. Carefully cut the exposed backing paper horizontally.



Hold backer paper in one hand and peel graphic with the other.



Let graphic hang, face down and make a clean cut right across backer paper.

5. Holding top of graphic 1-2" from window, squeegee from the center tapeline upward toward the edge. Overlap your strokes to prevent air from being trapped. Continue all the way to the top of the graphic until it is adhered to the window/glass.



Squeegee in a zig-zag motion, starting at the blue tape continuing upwards.

6. Remove blue tape and fold bottom half of graphic from the middle up. Begin to peel backer paper from the center out. In a zig-zag motion begin squeegeeing the graphic from the tape line down until the entire graphic is adhered to window/glass.



Remove remaining backing paper by folding graphic onto itself bottom up.



Finish squeegeeing similar to previous side until entire graphic is adhered to the window.

7. Take the small decal that was set aside from step one, remove the backing paper and squeegee in place, making sure to center it under the larger snail graphic.



# FAST SIGNS®

## Applying Your Decals: Printed Dragon Installation

### WHAT YOU'LL NEED:

- 70/30 Isopropyl Alcohol/Water Solution
- Squeegee (enclosed)
- Painters Tape
- Scissors
- Paper Towels

### SURFACE PREP FOR INSTALLATION:

Clean surface with 70/30 Isopropyl Alcohol/water solution. Be sure to remove any residual dirt, dust or adhesive. Do not use ammonia based cleaners as they may reduce the adhesion of the new graphics.


Pick an area that has a flat and smooth texture for best adhesion.

**Each shape should, ideally, be around 4-6" away from each other.**



*\*Graphics are extremely sticky. Do not let adhesive side of graphic touch the floor prematurely once the backing paper is removed.*

1. Make sure surface is clean of debris and dust. Sweep area thoroughly before install. Once swept, clean surface with alcohol solution prior to beginning installation. Surface must be dry before proceeding.
2. Start off by placing individual graphics in a pattern to create your Dragon. Be creative, adjust as needed. (DO NOT REMOVE BACKING PAPER YET)
3. Once the graphics are in your desired location, start by installing the large rectangle. Secure entire piece with a strip of painters tape down the middle.
4. Fold over the left half and peel the backing paper from outer corner. Use a good pair of scissors to cut the backing paper.

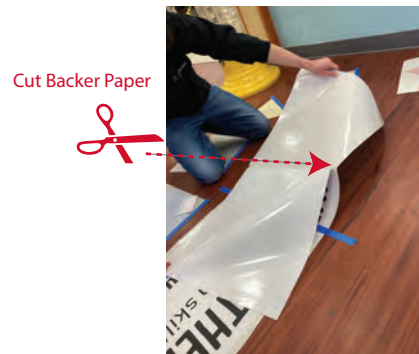

5. Holding the graphic tight with your left hand, begin squeegeeing middle out and work your way left to adhere the graphic to the floor.
6. Remove the painters tape and fold over the right side of the graphics to remove the remaining backing paper. Holding the graphic with your right hand, begin squeegeeing over previously squeegeed area and work your way right until entire piece is applied.



Squeegee in a zig-zag motion, starting at blue tape continuing left to the end of the graphic.



Remove remaining backing paper by folding graphic back onto itself right to left.



Finish squeegeeing similar to previous side until entire graphic is adhered to the floor.

OPTIONAL: This would be a good time to have a friend with an extra set of hands assist you.

**TIP:** Any trapped air bubbles can be removed by poking with an Xacto knife.



## Applying Your Decals: Printed Dragon Installation - Continued

*\*Graphics are extremely sticky. Do not let adhesive side of graphic touch the floor prematurely once the backing paper is removed.*



**1.** Place blue tape in the center of the graphic.

OPTIONAL: This would be a good time to have a friend with an extra set of hands assist you.



**2.** Starting at one end, begin to peel back the graphic up toward your blue tape line. Cut and discard backing paper.



**3.** Hold graphic in one hand, and begin to squeegee with the other hand away from center until the graphic is fully adhered to the floor.



**4.** In a similar fashion, remove the remaining backer paper as you squeegee the other side of the graphic until your entire graphic is adhered to the floor.

*\*Graphics are extremely sticky. Do not let adhesive side of graphic touch the floor prematurely once the backing paper is removed.*



**1.** All numbers have been masked with transfer tape to allow for easy installation. Two sides are folded over for reinforcement. Cut to release before next step. Be careful not to cut printed graphic.



**2.** Place a strip of blue tape across the top of each numbered shape (1-12) to create a hinge.



**3.** Once taped, carefully flip the graphic up from the untaped edge (bottom) with one hand and peel backer paper from the tape line halfway to the edge of the graphic.



**4.** While still holding the graphic in one hand. Use your other hand to begin squeegeeing from the blue tape down in a zig-zag fashion until the whole graphic is adhered to the floor. Repeat for all of the numbers.



**5.** To finish your Dragon, carefully remove blue painters tape and slowly begin to peel away masking tape from one side to the other at a sharp angle.